

## Type HT Chimney

UL Listed to:

- UL 103 HT Factory-Built Chimneys for Residential Type and Building Heating Appliances
- CAN/ULC-S604 STANDARD FOR FACTORY- BUILT TYPE A CHIMNEYS

Model HT - Double Wall 1" Fiber Insulation

## Installation Instructions

A MAJOR CAUSE OF CHIMNEY RELATED FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES (AIR SPACES) TO COMBUSTIBLE MATERIALS. IT IS OF UTMOST IMPORTANCE THAT THIS CHIMNEY BE INSTALLED ONLY IN ACCORDANCE WITH THESE INSTRUCTIONS.



### HT 103 CHIMNEY

Double-wall stainless steel all fuel system

[www.jeremiasinc.com](http://www.jeremiasinc.com)

**Important:** Read all instructions before beginning to install. Failure to comply with these instructions may result in a hazardous installation resulting in injury or damage to property. An improper installation will void the manufacturer's warranty.

Keep these instructions for future reference.

For Technical Support or more product information please contact us at 678-388-2740 or visit our website at [www.jeremiasinc.com](http://www.jeremiasinc.com)



10116799

# INDEX

Pg.	Description
2	Listings
2	Codes and Permits
3	Product Code Key
3	General Installation Requirements
3	Termination Requirements
4	Suggested Tools, Equipment & Hardware
4	Clearances
4	Minimum Framing Dimensions
4	Support Spacing
4	Chimney Size
4	Chimney Location
4	Chimney Length
5	Joint Assembly
5	Joint Assembly - Alternate
6	Cutting Pipe to Length
6	Ceiling Support Box Square & Round (CS & CSR)
7	Chimney Adapter (AD)
7	Adjustable Wall Bracket (AWB)

8	Extended Wall Brackets (EWB)
8	Wall Thimble (WT)
9	Tee with Cap (TWC)
9	Tee Support (TS)
9	Tee Support Extended Brackets (SEB)
10	Roof Support (RS)
10	Anchor Plate (AP)
11	Elbow Offset / Elbow Strap (ES)
11	Firestop Radiation Shield (FRS)
11	Attic Insulation Shield (AIS)
12	Flat & Pitch Roof Flashings (FRF & PRF)
12	Storm Collar (SC)
12	Rain Cap (RC)
13	Spark Arrestor (SA)
13	Telescopic Roof Brace (TRB)
13	Final Check
13	Important Notice
13	Operation and Maintenance
14	Installation Examples
15	Warranty

## Introduction

Jeremias HT Chimney provides the highest quality product in its class. It features all welded inner and outer pipes, flue gas pipes made of 316L Stainless Steel, a unique design which leaves no destructive heat bridge between inners and outers and a strong, simple locking band design which makes for easy assembly. Certification by Underwriters Laboratory and a best-in-class warranty assure you the finest possible product.



 
## Chimney Applications


HT Chimney is for use with heating appliances utilizing solid fuels, oil, gas (propane or natural) or coal as prescribed by the appliance manufacturer. These include free standing wood stoves, fireplace inserts, fireboxes, fireplaces, furnaces, cook stoves, boilers and water heaters that require a UL103HT chimney system. Do not use with forced draft positive pressure appliances. You must not mix parts or products from any other venting system or supplier. Do not install damaged or modified parts.

## Listings

Jeremias HT Chimney is tested and listed to UL 103 HT Standard for Factory-Built Chimneys for Residential Type and Building Heating Appliances for 5, 6, 7 & 8" diameter. And, in Canada CAN/ULC-S604 STANDARD FOR FACTORY- BUILT TYPE A CHIMNEYS.

## UL Product Labels

 LISTED M#59917	 EXHAUST SYSTEMS							
			UL-103 Type HT Factory-Built Chimneys for Residential Type and Building Heating Appliances 11 <sup>th</sup> ed., Oct. 15 CAN/ULC-S604 STANDARD FOR FACTORY- BUILT TYPE A CHIMNEYS 4 <sup>th</sup> ed. Dec. 2016					
<table border="0"> <thead> <tr> <th>MODEL HT</th> <th>PART #:</th> <th>Date</th> </tr> </thead> <tbody> <tr> <td>MINIMUM CLEARANCE - 2 INCH AIR SPACE TO COMBUSTIBLE MATERIALS AND BUILDING INSULATION. INSTALL AND USE ONLY IN STRICT COMPLIANCE WITH JEREMIAS INSTALLATION INSTRUCTIONS PACKAGED WITH SUPPORT ASSEMBLY. FOR CONNECTION TO SOLID FUEL, OIL OR GAS BURNING APPLIANCES NORMALLY PRODUCING FLUE GASES OF 1,000°F (540°C) OR LESS. SUITABLE FOR INTERIOR OR EXTERIOR INSTALLATION.</td> <td>2 POUÇES DE DEGAGEMENT MINIMUM AUX MATERIAUX COMBUSTIBLES ET ISOLANT DE BATIMENT. INSTALLER SELON LES INSTRUCTIONS DE JEREMIAS. POUR UTILISATION SUR APPARELS A COMBUSTIBLE DE TYPE HUILE OU GAZ AVEC TEMPERATURE DE FONCTIONNEMENT A 1,000°F (540°C) OU MOINS. POUR INSTALLATION INTERIEUR ET EXTERIEUR</td> <td></td> </tr> </tbody> </table>			MODEL HT	PART #:	Date	MINIMUM CLEARANCE - 2 INCH AIR SPACE TO COMBUSTIBLE MATERIALS AND BUILDING INSULATION. INSTALL AND USE ONLY IN STRICT COMPLIANCE WITH JEREMIAS INSTALLATION INSTRUCTIONS PACKAGED WITH SUPPORT ASSEMBLY. FOR CONNECTION TO SOLID FUEL, OIL OR GAS BURNING APPLIANCES NORMALLY PRODUCING FLUE GASES OF 1,000°F (540°C) OR LESS. SUITABLE FOR INTERIOR OR EXTERIOR INSTALLATION.	2 POUÇES DE DEGAGEMENT MINIMUM AUX MATERIAUX COMBUSTIBLES ET ISOLANT DE BATIMENT. INSTALLER SELON LES INSTRUCTIONS DE JEREMIAS. POUR UTILISATION SUR APPARELS A COMBUSTIBLE DE TYPE HUILE OU GAZ AVEC TEMPERATURE DE FONCTIONNEMENT A 1,000°F (540°C) OU MOINS. POUR INSTALLATION INTERIEUR ET EXTERIEUR	
MODEL HT	PART #:	Date						
MINIMUM CLEARANCE - 2 INCH AIR SPACE TO COMBUSTIBLE MATERIALS AND BUILDING INSULATION. INSTALL AND USE ONLY IN STRICT COMPLIANCE WITH JEREMIAS INSTALLATION INSTRUCTIONS PACKAGED WITH SUPPORT ASSEMBLY. FOR CONNECTION TO SOLID FUEL, OIL OR GAS BURNING APPLIANCES NORMALLY PRODUCING FLUE GASES OF 1,000°F (540°C) OR LESS. SUITABLE FOR INTERIOR OR EXTERIOR INSTALLATION.	2 POUÇES DE DEGAGEMENT MINIMUM AUX MATERIAUX COMBUSTIBLES ET ISOLANT DE BATIMENT. INSTALLER SELON LES INSTRUCTIONS DE JEREMIAS. POUR UTILISATION SUR APPARELS A COMBUSTIBLE DE TYPE HUILE OU GAZ AVEC TEMPERATURE DE FONCTIONNEMENT A 1,000°F (540°C) OU MOINS. POUR INSTALLATION INTERIEUR ET EXTERIEUR							
Jeremias, Inc., 983 Industrial Park Drive, Marietta, GA, 30063      www.jeremiasinc.com								

 LISTED M#59917	 EXHAUST SYSTEMS							
			UL-103 Type HT Factory-Built Chimneys for Residential Type and Building Heating Appliances 11 <sup>th</sup> ed., Oct. 15 CAN/ULC-S604 STANDARD FOR FACTORY- BUILT TYPE A CHIMNEYS 4 <sup>th</sup> ed. Dec. 2016					
<table border="0"> <thead> <tr> <th>MODEL HT</th> <th>PART #:</th> <th>Date</th> </tr> </thead> <tbody> <tr> <td>THIS ITEM TO BE USED ONLY AS A PART OF A JEREMIAS HT LISTED SYSTEM. CAUTION: READ AND FOLLOW JEREMIAS INSTALLATION INSTRUCTIONS. MAINTAIN SPECIFIED AIRSPACE CLEARANCES TO COMBUSTIBLE MATERIALS</td> <td>CET ARTICLE DOIT ETRE INSTALLE FAISANT PARTI D'UN SYSTEME APPROUVE DE JEREMIAS INC. ATTENTION : VOUS REFERER AU GUIDE D'INSTALLATION DE JEREMIAS POUR LES DEGAGEMENTS AUX MATERIAUX COMBUSTIBLES</td> <td></td> </tr> </tbody> </table>			MODEL HT	PART #:	Date	THIS ITEM TO BE USED ONLY AS A PART OF A JEREMIAS HT LISTED SYSTEM. CAUTION: READ AND FOLLOW JEREMIAS INSTALLATION INSTRUCTIONS. MAINTAIN SPECIFIED AIRSPACE CLEARANCES TO COMBUSTIBLE MATERIALS	CET ARTICLE DOIT ETRE INSTALLE FAISANT PARTI D'UN SYSTEME APPROUVE DE JEREMIAS INC. ATTENTION : VOUS REFERER AU GUIDE D'INSTALLATION DE JEREMIAS POUR LES DEGAGEMENTS AUX MATERIAUX COMBUSTIBLES	
MODEL HT	PART #:	Date						
THIS ITEM TO BE USED ONLY AS A PART OF A JEREMIAS HT LISTED SYSTEM. CAUTION: READ AND FOLLOW JEREMIAS INSTALLATION INSTRUCTIONS. MAINTAIN SPECIFIED AIRSPACE CLEARANCES TO COMBUSTIBLE MATERIALS	CET ARTICLE DOIT ETRE INSTALLE FAISANT PARTI D'UN SYSTEME APPROUVE DE JEREMIAS INC. ATTENTION : VOUS REFERER AU GUIDE D'INSTALLATION DE JEREMIAS POUR LES DEGAGEMENTS AUX MATERIAUX COMBUSTIBLES							
Jeremias, Inc., 983 Industrial Park Drive, Marietta, GA, 30063      www.jeremiasinc.com								

## Codes and Permits

Your installation must be in conformance with the current version of NFPA 211 and local or state building codes, whichever has jurisdiction. ALWAYS CONTACT LOCAL BUILDING OFFICIALS OR FIRE OFFICIALS REGARDING PERMITS, RESTRICTIONS AND INSTALLATION INSPECTIONS REQUIRED IN YOUR AREA.

**Product Code Key**

Each part manufactured by Jeremias is identified with a product code. The product code contains the Model, Vent size, Part ID, and Other information.

**Part Number Example:**

HT	06	-	SS	12
<b>Model</b>	<b>Chimney Diameter</b>		<b>Material</b>	<b>Product ID</b>
	5" to 8"		SS = 316ss Inner / 304ss outer GAL = 316ss Inner / Galv Outer	

Product ID		
AD = Chimney Adapter	LB = Locking Band	CSRT = Round Ceiling Trim
AP = Anchor Plate	12 = 12" Length	SA = Spark Arrestor
IS = Attic Insulation Shield	18 = 18" Length	SC = Storm Collar
RC = Rain Cap	24 = 24" Length	TWC = Tee with Cap
ELKT = Elbow Kit (Degree)	36 = 36" Length	CSS = Ceiling Support Square
ELS = Elbow Strap	48 = 48" Length	TS = Tee Support
ERB = Extended Roof Brace	AVL = Adjustable Vent Length	WB = Wall Bracket
FRS = Firestop Radiation Shield	RS = Roof Support	WT = Wall Thimble
FRF = Flat Roof Flashing	RST = Trim Collar	
PRF = Pitched Roof Flashing	CSR = Round Ceiling Support	

**General Installation Requirements**

- Except for installation in one or two-family dwellings, a factory-built chimney system that extends through any zone above that on which the connected appliance is located, shall be provided with an enclosure having a fire resistance rating equal to or greater than that of the floor or roof assemblies through which it passes.
- Chimney to be sized in accordance with the appliance manufacturer's instructions.
- Parts of the chimney system below the roofline should be enclosed to help reduce condensation, creosote buildup and improve draft.
- Creosote and soot – formation and need for removal: When wood is burned slowly, it produces tar and other organic vapors, which combine with expelled moisture to form creosote. The creosote vapors condense in the relatively cool chimney flue of a slow-burning fire. As a result, creosote residue accumulates on the flue lining. When ignited this creosote makes an extremely hot fire. The chimney should be inspected once every 2 months during the heating season to determine if a creosote or soot buildup has occurred. If creosote or soot has accumulated, it should be removed to reduce the risk of chimney fire.
- To clean and inspect: Open or remove termination cap or cleanout tee to access the chimney.
- Contact local building or fire officials about restrictions and installation inspection in your area.
- Every chimney system must be planned and installed for performance and safety.
- Refer to the appliance manufacturer's instructions to determine venting requirements and limitations with respect to the installation and use of the appliance.
- Maintain rated clearances to combustibles over the entire length of the vent system.
- Do not field install insulation in any required clearance around the chimney system
- Reference the appliance manufacturer's installation and operating guides for maintaining ventilation and air circulation where required
- For planning and clearance purposes, nominal OD of chimney always equals ID plus 2", example = 6" Chimney OD is 8"
- Not all appliances are listed for use in mobile homes and may require special considerations. Refer to the appliance safety manual carefully.

**Termination Requirements**


In accordance with National Fire Protection Association Standard #211, the chimney must terminate at least 3 feet above the roof top penetration and 2 feet higher than any structure within a 10-ft. radius (see Fig 17). Chimney heights greater than 5 feet above the roof line must use additional support bracing. See Telescopic Roof Brace (TRB) section for instructions.

**Suggested Tools, Equipment & Hardware**

Safety Glasses	Drill	Plumb Bob, Level & Tape Measure	Abrasive Cutting Wheel/Grinder
Safety Gloves	Hammer	Caulk Gun	Power drill / screw / nut driver
Screwdrivers	Metal Snips	Ladder	5/16" Nut driver / socket wrench
High Temp Sealant	8-penny nails	#8 1-1/2" x 2-1/2" screws	
Roofing Nails	Reciprocating & Keyhole Saws	Framing Square	

**Clearances**

Maintain a 2" MINIMUM AIR SPACE CLEARANCE BETWEEN INSULATED CHIMNEY SECTIONS AND COMBUSTIBLE MATERIALS. Never fill any required clearance space with insulation or any other materials. Combustibles include lumber, plywood, sheetrock, plaster and lathe, electrical wiring and insulation. Observe all clearance and set back requirements for your appliance and connecting stove pipe as stated by the manufacturer. See Fig. 1.

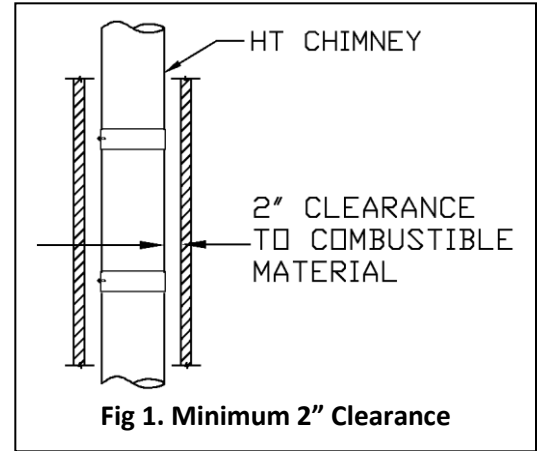

**Minimum Framing Dimensions through Wall or Ceiling**

Where the chimney passes through the wall or ceiling, minimum Clearance to Combustibles must be maintained. See Table 1. For Minimum Framing Requirement. Framing should be square (all 4 sides) and provide support for attaching chimney system assemblies. See Fig 2.


**Table 1. Minimum Framing Requirements**

Component	5" Diameter	6" Diameter	7" Diameter	8" Diameter
Ceiling Support – Round or Square	11¼" x 11¼"	12¼" x 12¼"	13¼" x 13¼"	14¼" x 14¼"
Wall Thimble	11¼" x 11¼"	12¼" x 12¼"	13¼" x 13¼"	14¼" x 14¼"
Firestop Radiation Shield	11¼" x 11¼"	12¼" x 12¼"	13¼" x 13¼"	14¼" x 14¼"
Attic Insulation Shield	11¼" x 11¼"	12¼" x 12¼"	13¼" x 13¼"	14¼" x 14¼"

Note: Framing dimension tolerance may be up to ½" larger but not smaller than the specified value.

**Table 2 – Maximum Support Capacity / Spacing**

Component		Vertical Support Height / Spacing		
Tee Support (TS)		52' (16m)		
Adjustable Wall Bracket (AWB)		10' (3m)		
Extended Wall Bracket (EWB)		8' (2.5m)		
Ceiling Support Square (CS)		44' (13.4m)		
Ceiling Support Round (CSR)		44' (13.4m)		
Anchor Plate (AP)		52' (16m)		
Roof Support (RS)		12' (3.7m)		
Elbow Support		Each Offset		
Tee Support Extended (SEB)	Distance from Wall	2" to 4"	5" to 10"	11" to 14"
	Height	24'	18'	16'

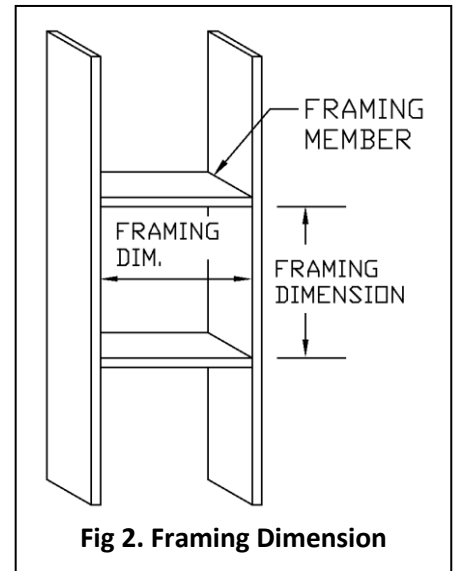

**Chimney Size**

Refer to the appliance manufacturer's installation instructions for proper sizing and chimney configuration.

**Chimney Location**

Locate the appliance so the chimney and chimney connector are straight and short as possible. Try to avoid modifications to structural components and other building components (Joists, studs, electrical, plumbing, etc.).

**Chimney Length**

Due to the engagement of the chimney sections, the effective installed length of any chimney pipe or fitting is 2-3/16" less than the described length.

## Enclosures


It is recommended that the Chimney be installed within the building envelope to help reduce condensation, creosote buildup and improve draft. The chimney should be enclosed where it passes through occupied spaces, closets, storage areas or any place where the chimney surface could be contacted by persons or combustible materials. In cold climates, exterior chimney systems should be enclosed in a chase. Maintain the 2" clearance to combustibles for all enclosures.

## Joint Assembly – Locking Band

HT Chimney segments are joined together with a Locking Band (LB) to create a complete chimney system.

To install (See Fig 3 & 4):

1. Orient the Chimney so the Flow arrow on the label is pointing up and away from the appliance.
2. Slide the female end down over the male end. Apply pressure and twist the vent to fully engage the sections. The vent lengths will reach a mechanical stop when fully engaged.
3. Note: The Locking Band is not symmetrical and must be oriented correctly. Position the Locking Band so that the number etching is right-side-up. When viewing the worm gear straight on, the nut is to the left. With the worm gear rotated to away from sight, the nut can be accessed with a screwdriver in your right hand.
4. Position the Locking Band around the joint capturing the beads from each pipe.
5. Use either a 5/16" socket or standard screwdriver to tighten the screw on the LB until it is snug, then tighten an additional 1/4 turn.

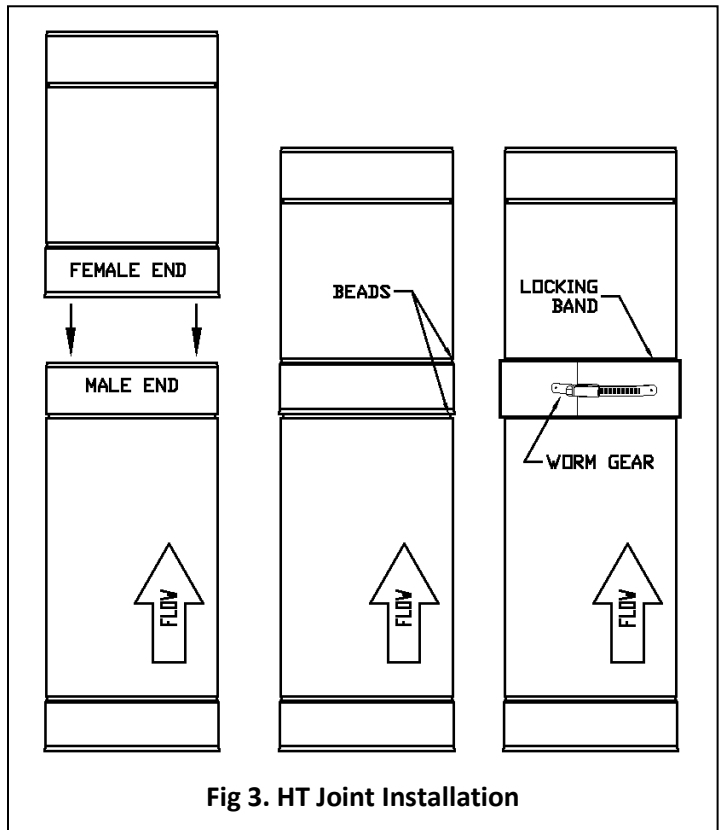


**Fig 3. HT Joint Installation**

## Joint Assembly - Alternate


HT Chimney segments can be joined together with screws instead of using a locking band.

To Install (See Fig 5):

1. Orient the Chimney so the Flow arrow on the label is pointing up and away from the appliance.
2. Slide the female end down over the male end. Apply pressure to fully engage the sections. The vent lengths will reach a mechanical stop when fully engaged.
3. Screw #8x1/2 long self-drilling screws, through the overlapping chimney joint. Only penetrate the outer wall of chimney. Install minimum of 3 screws. Caution: Do not drill more than 1/2 deep into chimney pipe.
4. Apply High Temperature (250°F) Silicone sealant over each screw to eliminate moisture penetration.

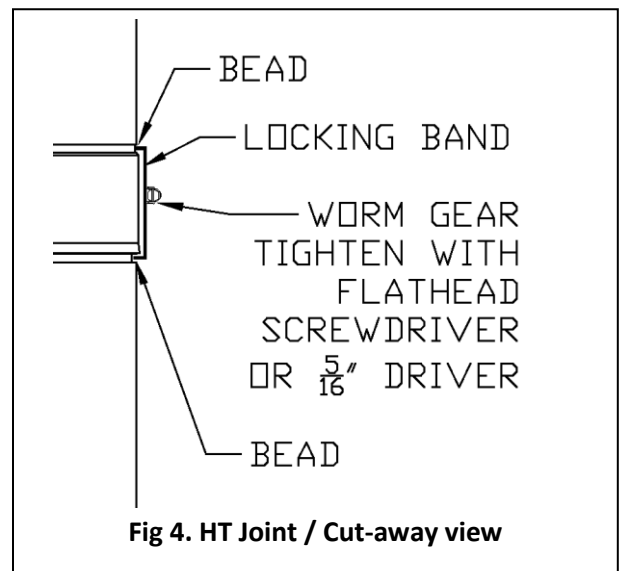

**Fig 4. HT Joint / Cut-away view**

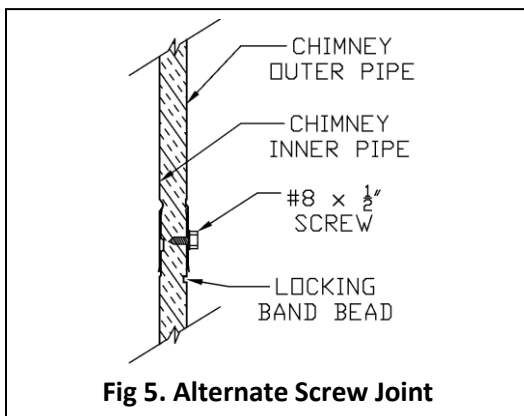





**Fig 5. Alternate Screw Joint**

### Cutting Pipe to Length

Standard pipe can be cut in the field to create a specific length where standard Fixed Lengths will not suffice. In this situation, screws are used instead of the Locking Band.

To Install (See Figs 6a-6d.):

1. Measure the length of vent required.
2. Add 2-3/16" to the required length to determine the overall cut length needed.
3. Measure from the Bottom (inlet) end up to the length determined in Step 2. Mark cut line around the entire pipe circumference.
4. Use abrasive cutting wheel or snips to cut along the mark line in step 2. Remove the Excess Length of the Outer Jacket.
5. With the insulation & inner pipe now exposed, slide the inner pipe and insulation so that it is flush with the cut edge of the outer.
6. Use box cutter or knife to cut the insulation and expose the inner liner.
7. Use cutting wheel to cut the inner liner so that it is flush with the insulation and outer jacket.
8. Install length as described in Joint Assembly – Alternate section.

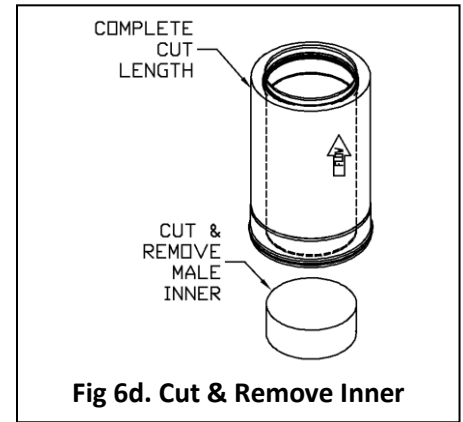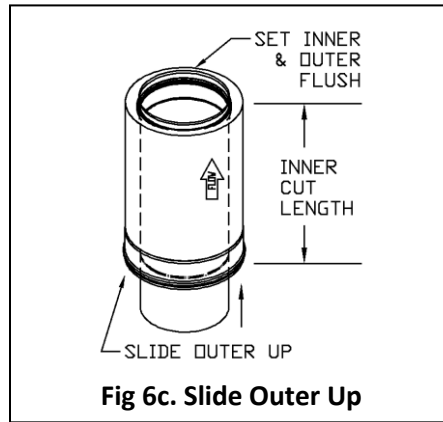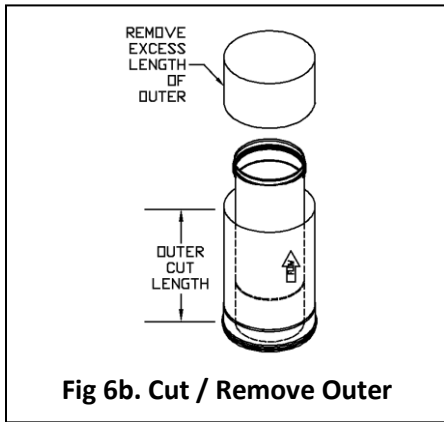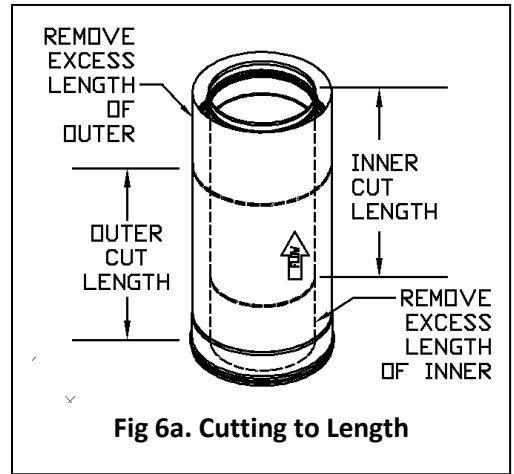


### Ceiling Support Square & Round (CS & CSR)


The Ceiling Support Box is used to provide support and allow the chimney to pass through a flat or pitched cathedral ceiling in the room above where the appliance is located.

To install (See Fig. 8, 7, 9 & 28):


1. Determine the location where the chimney will pass through the ceiling. Plan the system to avoid obstructions such as electrical, plumbing and studs. Ensure required clearance to combustibles is maintained including clearance to pitched ceiling.
2. Establish a framed opening. Refer to Table #1 for proper Framing dimensions. Refer to Table #2 for maximum Support height.
3. Position the Support Box inside the framed opening. Adjust the Ceiling Support vertically within the framed opening. The Square portion must protrude a minimum of 2" into the finished ceiling.
  - a. Two L-brackets are included with each CS. These L-brackets provide temporary support to the CS while it is being installed. Measure the thickness of the framing materials to determine the location where the L-brackets should be positioned. Mark the location and secure L-brackets to the outside surface of the support box using the self-drilling screws provided.
4. Secure the Ceiling Support by driving a minimum of two x 2" screws (provided) per side (minimum of 8 screws total) through the Ceiling Support box and into the framed opening. Alternatively, three 8-penny nails per side can be used.

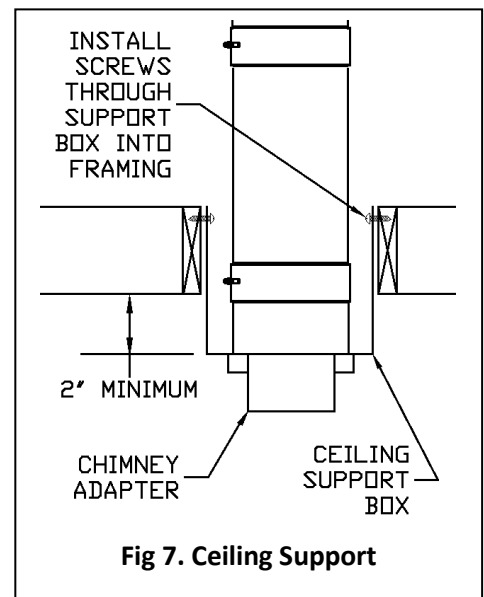

5. Ceiling Support Square (Only) - U-Shaped trim plates are used to close off any gaps around the Ceiling Support and provide a finished look.
  - a. Position 1<sup>st</sup> U-Shaped trim plate around the ceiling box and flush with the ceiling surface. Secure with two, 2" screws (provided) in the corners of the trim plate.
  - b. Position 2<sup>nd</sup> U-Shaped trim plate around the opposite side of the box. The extended legs will overlap the 1<sup>st</sup> U-Shaped bracket. Secure with two, 2" screws (provided) in the corners of the trim plate and two screws through the pilot hole that overlaps the 1<sup>st</sup> bracket.
6. Ceiling Support Round (Only) –
  - a. For installation in a flat ceiling a donut shaped trim collar is provided to close off any gaps around the Ceiling Support and provide a finished look. Position the donut trim plate around the ceiling support and secure with screws provided.
  - b. For installation on pitched ceiling, an oval shaped pitched collar is available. Select the collar to meet the pitch of the ceiling. Secure collar to ceiling with fasteners provided.
7. Connect Chimney Adapter to the 1<sup>st</sup> length of chimney pipe. Refer to Joint Assembly section.
8. Lower Chimney Adapter and Chimney Pipe assembly down into the Ceiling Support. Align and engage the single-wall tube of the Chimney adapter through the hole in the ceiling support.

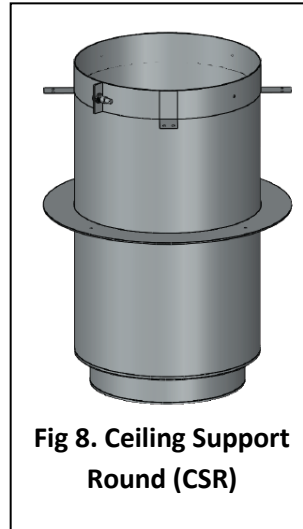

**Fig 8. Ceiling Support Round (CSR)**

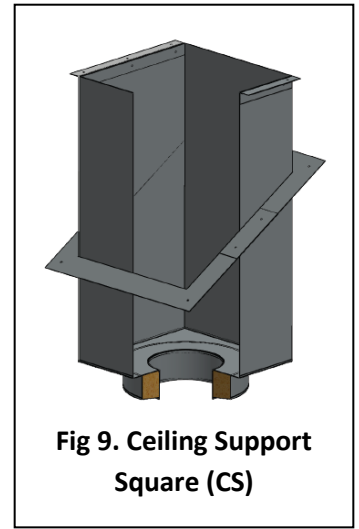


**Fig 9. Ceiling Support Square (CS)**

**Chimney Adapter (AD)**

The Chimney Adapter is used to adapt smoke pipe to double-wall chimney.

To Install (See Fig 10):

1. Connect AD to chimney section. Refer to Joint Assembly section for details.
2. Position the Chimney Adapter as described in Ceiling Support Box or Wall Thimble section.
3. Engage smoke pipe such that the single-wall of the Chimney Adapter extends down inside the smoke pipe.
4. Secure smoke pipe to Chimney adapter with 1/2" self-drilling screws through adapter or as described by smoke pipe manufacturer.

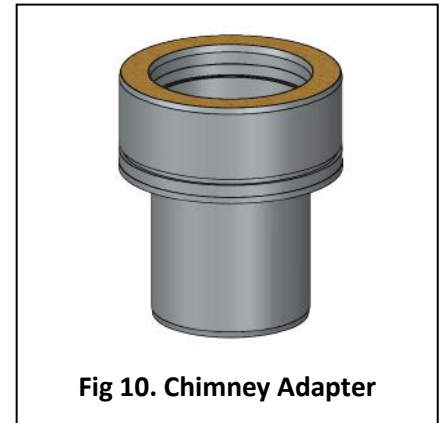


**Fig 10. Chimney Adapter**

**Adjustable Wall Bracket (AWB)**

The Adjustable Wall Bracket is used to provide lateral support for the chimney. The AWB provides adjustable distance from the wall.

To Install (See Fig 11 & 29):

1. Refer to Table 2 for required maximum spacing distance.
2. Secure mounting bracket to wood stud or suitable solid structure with 5/8" lag bolts.
3. Route vent through clamp band and secure by tightening Clamp Band Bolts.

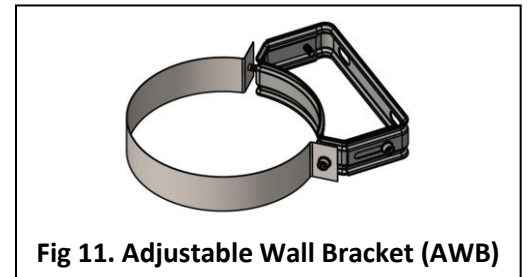



**Fig 11. Adjustable Wall Bracket (AWB)**

### Extended Wall Bracket (EWB)

The Extended Wall Brackets are adjustable to provide lateral support for the chimney for up to 14" away from the wall. This allows the chimney to clear roof overhang or other obstacles.

To Install (See Fig 12, 13 & 29):

1. Refer to Table 2 for required minimum spacing distance.
2. Determine location and required distance chimney will be from the wall.
3. Position the wall band on the extended bracket, adjust to the required location, align clearance holes and secure each leg bracket to the band using 2 bolts each. Note; the wall brackets can be positioned with the mounting feet pointing inwards or out.
4. Secure brackets to wood stud or suitable solid structure with 5/8" lag bolts.
5. Route vent through clamp band and secure by tightening Clamp Band Bolts.

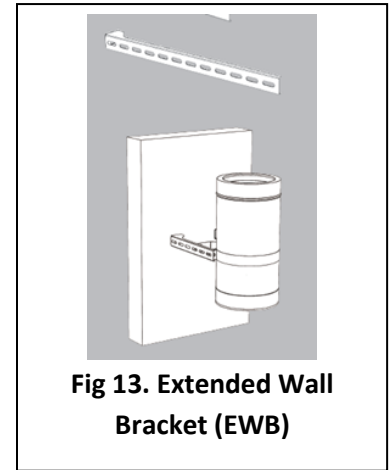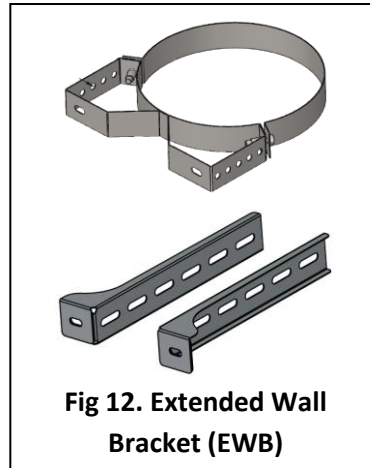


### Wall Thimble (WT)

A Wall Thimble is required where the chimney passes through a combustible wall. The Wall Thimble includes 2 cylinders that telescopically adjust to fit the thickness of the wall.

To Install (See Fig. 14, 15, and 16):

1. Determine the location where the chimney will pass through the wall. Plan the system to avoid obstructions such as electrical, plumbing and studs.
2. Cut a hole in the wall and build a framed in opening. Refer to Table #2 for proper framing dimensions.
3. From the outside, position the cylinder of the (unpainted) Exterior Thimble in the framed opening. Secure plate to exterior wall using four 2" long screws (provided).
4. Install Tee Support (See Tee Support section)
5. Install Tee with Cap (See Tee with Cap section)
6. From the inside, align the (painted) cylinder with the chimney adapter exterior cylinder from Step #3.
7. Engage (painted) inner shield until it contacts the Chimney Adapter (AD). Ensure that minimum 4" of chimney pipe and (painted) inner shield extends beyond the finished wall.
8. Install Wall Thimble inner trim over (painted) inner shield. Secure with four (black) 2" long wood screws provided.
9. From the exterior, position the wall thimble upper trim against the alignment trim and round tee snout. Secure with two #8 Self-drilling screws.
10. Use high-temperature sealant (500°F) to seal around chimney length, seams and all plates.

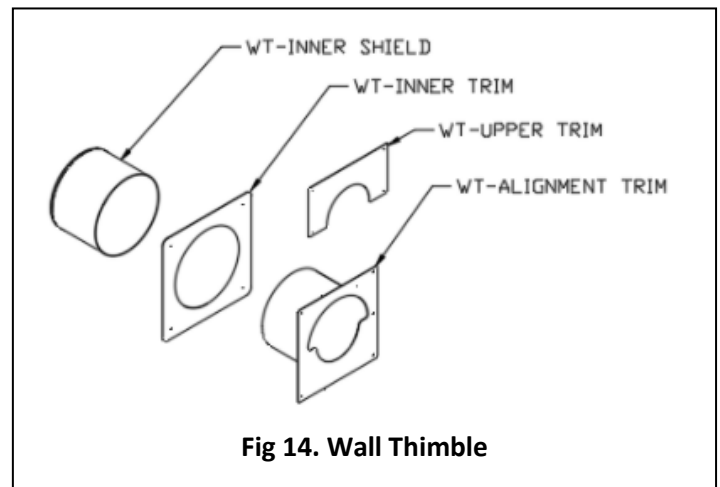



### Tee with Cap

The Tee is used when the chimney passes horizontally through a wall to a vertical chimney. The Tee Cap is located under the Tee to collect ash. The Tee Cap can be removed to provide access to the chimney for inspection and cleaning (See Chimney Maintenance and Cleaning section). When locating the Tee & Cap, ensure required clearance to combustibles are maintained including clearance under the tee cap for access and removal.

To Install (See Fig 15 & 16):

1. Determine the location where the chimney will pass through the wall.
2. Install Wall Thimble.
3. Determine the length of chimney pipe required to pass through the wall and extend a minimum 4" beyond the finished wall.
4. Connect chimney length to the Tee snout. Secure length with locking band.
5. Connect the Tee Support to the Tee. Secure with locking band.
6. Position the Tee snout in the Wall Thimble alignment trim plate, level the tee support plate, and secure the Tee Support brackets to wood studs or suitable solid structure with the provided hardware.

### Tee Support (TS)

The TS is a section of chimney that is used to provide vertical support. The Tee can be suspended below the TS or positioned on top of the TS. The TS Wall Brackets can be installed below the TS or above the TS.

To Install (See Fig 15 & 16):

1. Refer to Table 2. For maximum chimney height Extended Brackets and support.
2. Use supplied fasteners to bolt Wall Brackets to TS in the desired position (above or below the TS).
3. Connect the Tee Support to the Tee in the desired position with the provided locking band.
4. Position the Tee snout in the Wall Thimble alignment trim plate, level the tee support plate, and secure the Tee Support brackets to wood studs or suitable solid structure with the provided hardware.

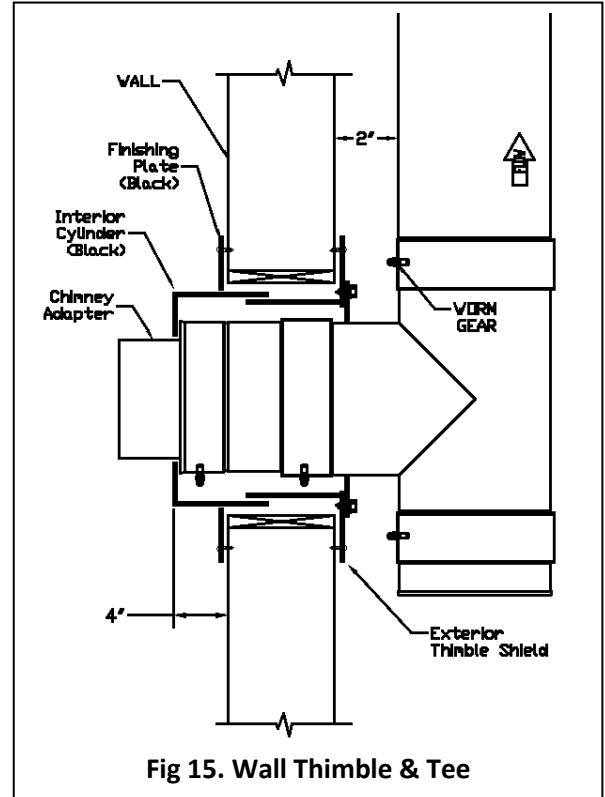


Fig 15. Wall Thimble & Tee

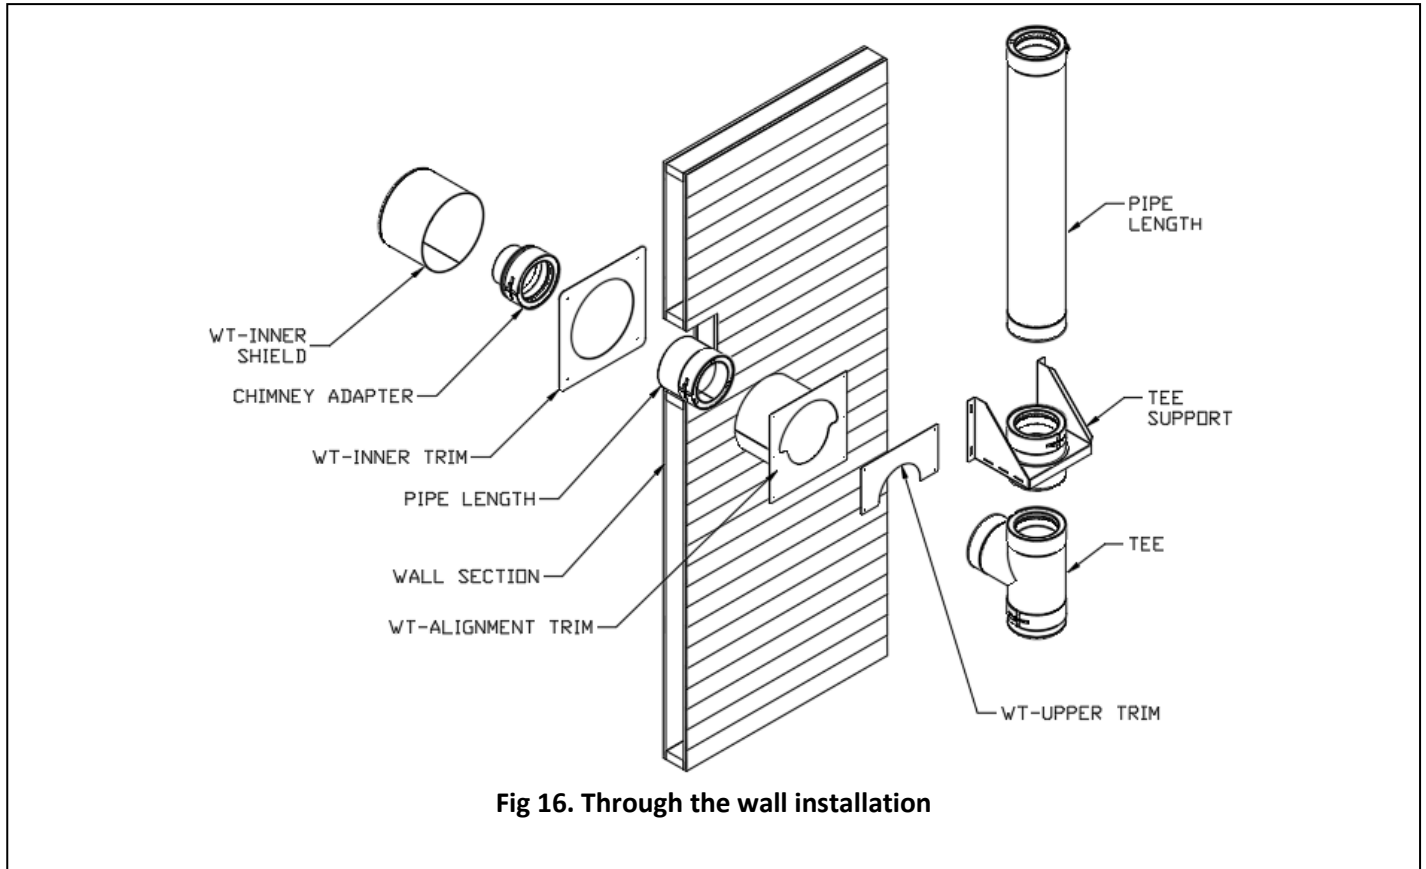



Fig 16. Through the wall installation

### Tee Support Extended Brackets (TSEB)

The TSEB allows the Tee Support plate to be adjusted up to 14" away from the wall surface. The Support Extended Brackets are used with the standard Tee Support Plate. The brackets can be positioned above or below the Tee support.

To Install (See Fig.17)

1. Refer to Table 2. Do not exceed the maximum chimney height Extended Brackets can support. Note that the support height varies based on the distance the chimney pipe is from the wall.
2. Determine where the tee is to be located. Position the Tee Plate on the Brackets and use supplied fasteners to bolt SEB Brackets to the Tee Support Plate.
3. Secure SEB Brackets to the wall. Ensure Wall Brackets are mounted to joist or other solid structure.
4. Install adjoining chimney lengths as described in Joint Assembly section.

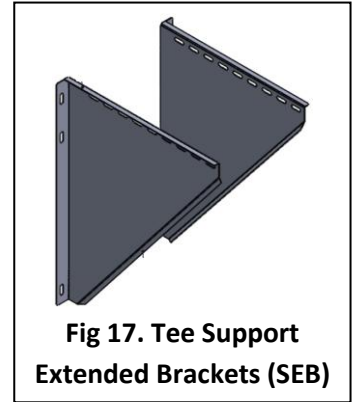


**Fig 17. Tee Support Extended Brackets (SEB)**

### Roof Support (RS)

The Roof Support (RS) provides vertical support for the chimney both above and suspended below the Roof Support. It may also be used to provide supplemental support when the total chimney height exceeds the capacity of the primary support.

To Install (See Fig. 18)

1. Refer to Table 2– Maximum Support Capacity / Spacing. Do not exceed the maximum chimney height the RS can support.
2. Determine where the RS is to be located. The brackets of the RS are to be positioned on top of framed roof opening, rafters or other solid surface.
3. Ensure minimum 2" clearance to combustible materials is maintained.
4. Position the RS around the chimney leaving the band loose so the Roof support can be adjusted.
5. Locate the Brackets on top of framing. Align pilot holes with wood rafters. Use a minimum of three #10 x 2-1/2" wood screws to secure each bracket to wood rafter.
6. Tighten worm gears to clamp RS to chimney pipe
7. Secure RS to Chimney Pipe by driving one #10 x 1/2" long self-drilling screw through the pilot hole in the RS band and into the outer casing of the Chimney Pipe. Note: Do not puncture the inner flue pipe with screw.
8. Install adjoining chimney lengths as described in Joint Assembly section.

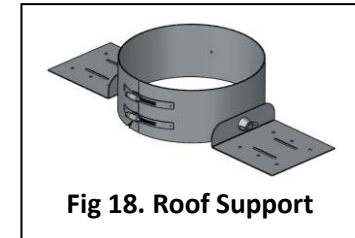

**Fig 18. Roof Support**

### Anchor Plate (AP)


The Anchor Plate (AP) connects a masonry fireplace or a factory-built fireplace to Jeremias HT chimney.

To Install for Masonry fireplace(see Fig 19) :

1. Follow the requirements of the local building code for connecting factory-built chimney to masonry fireplace.
2. Refer to Table 2– Maximum Support Capacity / Spacing. Do not exceed the maximum chimney height the AP can support.
3. Ensure the top of the masonry is structurally sound and has a level surface. Correct any masonry issues accordingly.
4. Apply 1,000°F High temperature sealant around flue opening
5. Position the Anchor Plate over the fireplace opening.
6. Mount AP to fireplace with (4) masonry anchors
7. Install adjoining chimney lengths as described in Joint Assembly section.

To Install for factory-built fireplaces:

1. Read and comply with the fireplace manufacturers' installation instructions. Verify model HT chimney is approved for use with the appliance.
2. Refer to Table 2– Maximum Support Capacity / Spacing. Do not exceed the maximum chimney height the AP can support.
3. Refer to fireplace manufacturer's instructions regarding application of 1,000°F High temperature sealant around flue opening
4. Position the Anchor Plate over the fireplace opening.
5. Mount AP to fireplace with (4) 5/8" stainless steel sheet metal screws
6. Install adjoining chimney lengths as described in Joint Assembly section.

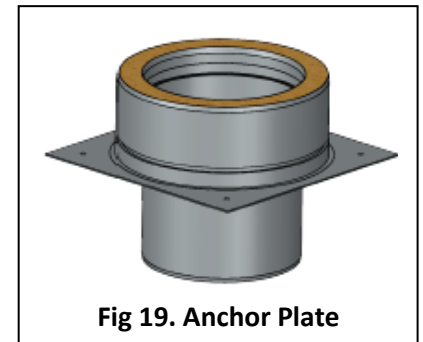

**Fig 19. Anchor Plate**

### Elbow Offset

An elbow offset may be necessary to avoid interference with joists or other obstacles. The maximum offset angle is 30 Degrees. Maximum of 1 offset (2 elbows) per installation. Maximum horizontal offset distance between elbows is 8 ft. The Elbow Offset must be supported with an Elbow Strap or other support.

To Install (See Fig. 20)

1. Attach (lower) Elbow to chimney section & secure with locking band (see Joint Assembly section).
2. Attach offset length (Maximum 8 ft. offset length). During installation provide support to offset to avoid stress on elbow.
3. Install Elbow Strap to support the chimney.
  - a. Position Elbow Strap at the top of the offset immediately before the second elbow.
  - b. Tighten band of the Elbow Strap around offset
  - c. Attach Elbow Support Straps to framing member or other support member
  - d. Fix Straps to framing member with 2 x 8-Penny nails or 2 x #8, 1-1/2" long screws.
4. Attach the second (upper) Elbow to the offset and secure with locking band (see Joint Assembly section).

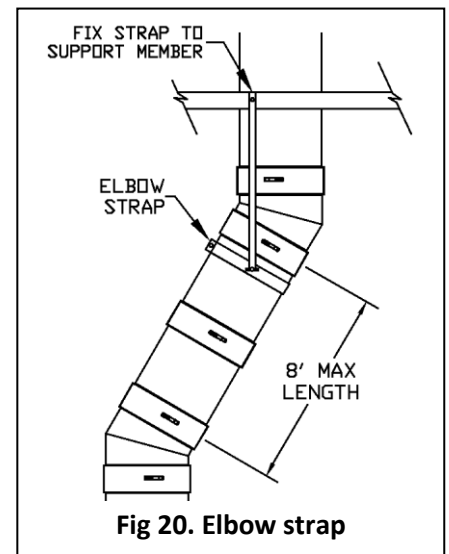


Fig 20. Elbow strap

### Firestop Radiation Shield (FRS)

A Firestop Radiation Shield is required in multistory installations at each location where the chimney passes through a ceiling or floor. The FRS is not required where a Ceiling Support Box is installed or where the chimney penetrates through the roof. The FRS is installed on the underside of the ceiling/floor with the cylinder positioned vertically inside the framed opening.

To Install (See Fig 21 & 22):

1. Establish the correct framing dimension (See Table 2)
2. From the underside of the ceiling, position the cylinder of the FRS inside the framed opening and with the plate flat against the ceiling surface. Note: The FRS has 1" square standoffs that should align inside the ceiling joist to ensure the minimum framed opening is established. The cylinder should extend the entire length through the framing. If the cylinder extends beyond the top side of the joist, it may be necessary to trim the cylinder so that it does not interfere with the AIS installed on top of the joist.
3. Secure the FRS with four 8-penny nails (or 1-1/2" screws) through the pilot holes provided.
4. Route chimney sections through the opening in the Radiation Shield.

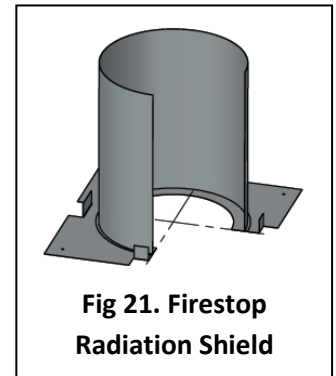


Fig 21. Firestop Radiation Shield

### Attic Insulation Shield (AIS)

The Attic Insulation Shield is required where an unenclosed chimney passes into an unenclosed space such as an attic. The function of the AIS is to keep combustible materials away from the chimney. The AIS is mounted on top of ceiling/floor joists and extends upward to provide shielding from insulation. The AIS is made of 2 telescopic cylindrical shields that can be adjusted to the required height.

To Install (See Fig. 22 & 23):

1. Establish a framed opening in the floor joist. Refer to Table 2. For correct framing dimension.
2. Assemble chimney such that at minimum 18" of chimney extends up through the framed opening.
3. Slide the AIS down over the chimney and position the plate of the AIS on the framed opening.
4. Secure the AIS to the framed opening using the screws provided

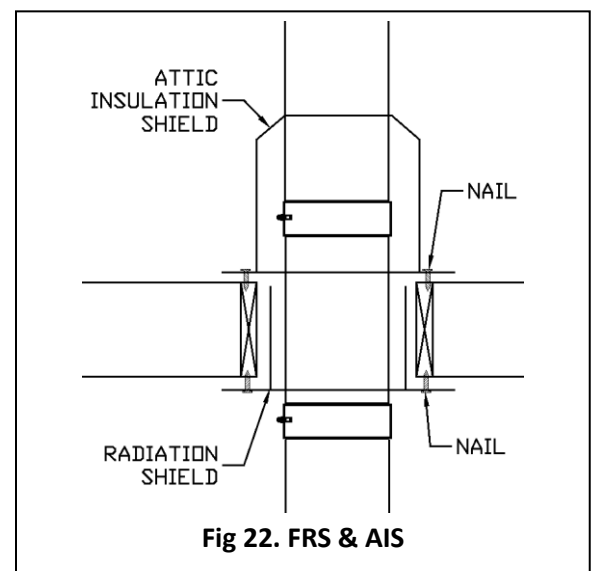


Fig 22. FRS & AIS

### Flashings

A flashing is used to seal off the opening where the vent passes through the roof. Choose the correct flashing to match the vent size and pitch of the roof.

To install (See Fig 24):

1. Ensure the proper clearance to combustibles is maintained.
2. Position the flashing over the vent. The upper end of the flashing is installed underneath the roofing material. The lower end of the flashing is installed on top of the roofing material.
3. Seal the flashing in place and secure with 2 roofing nails.

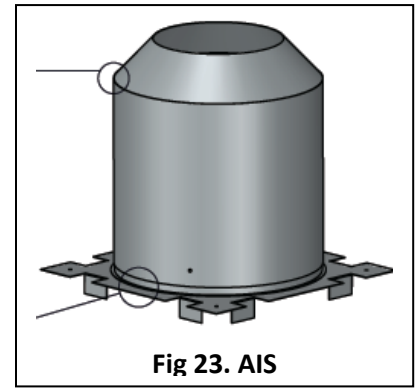


Fig 23. AIS

### Storm Collar (SC)

A Storm Collar is used to seal off the opening between the vent and flashing.

To Install (See Fig 24):

1. Position Storm Collar around vent and against the opening of the flashing.
2. Tighten worm gear to secure Storm Collar in place.
3. Apply sealant around seam between Storm Collar and vent.

### Jeremias Chimney Cap (JCC)

The Jeremias Chimney Cap is used to terminate the chimney system and prevent rain, animals, insects and other debris from entering the chimney system. The top section of the JCC is removeable for cleaning and maintenance. A spark arrestor screen is included. To install (See Fig 25):

1. Verify Jeremias Chimney Cap location conforms to details in Termination Requirements section.
2. Position the JCC on chimney and secure with included locking band. Refer to Joint Assembly section.

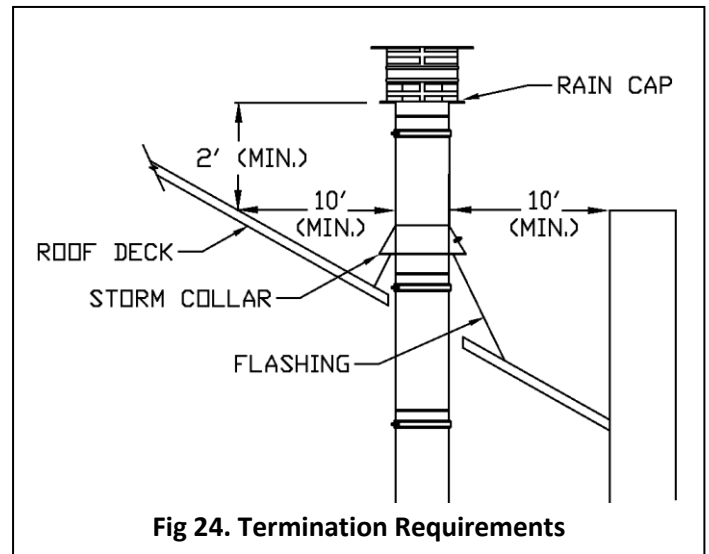


Fig 24. Termination Requirements

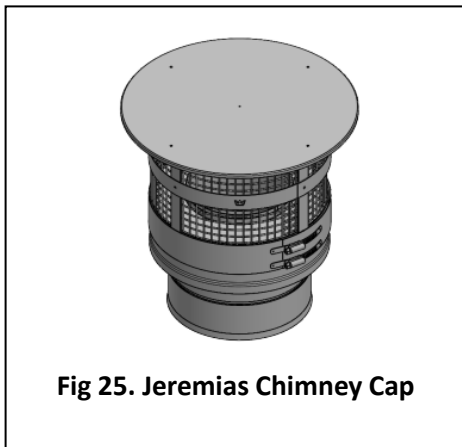



Fig 25. Jeremias Chimney Cap

### Spark Arrestor – Welded Wire (SA-WW)

The Spark Arrestor prevents floating embers from exiting the chimney while allowing flue gas to escape. Sold as a replacement only because the Jeremias Chimney Cap includes a spark arrestor.

To Install (See Fig 26):

1. Loosen the worm gears and remove the top section of the JCC.
2. Position the mesh cylinder within the top section of the JCC.
3. Reinstall the JCC top section, ensuring that the worm gears are tightened adequately and evenly.

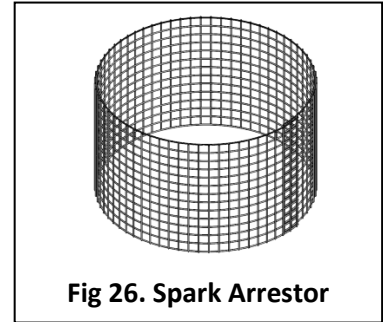


### Telescopic Roof Brace (TRB)

The Telescopic Roof Brace provides lateral support for the chimney that extended above the roof line. The TRB must be installed every 5 ft. of vertical chimney above the roof surface. No more than 5' of chimney may extend beyond the roof brace.

To Install (See Fig 27.)

1. Attach Legs of the Roof Brace to the Band
2. Position the Band around the chimney.
3. Attach the mounting brackets to the Legs
4. Position the mounting brackets on the roof such that the Legs form approximately a 60° angle between the legs and the chimney
5. Secure Mounting Brackets to the Roof surface.
6. Tighten all hardware nuts & bolts.

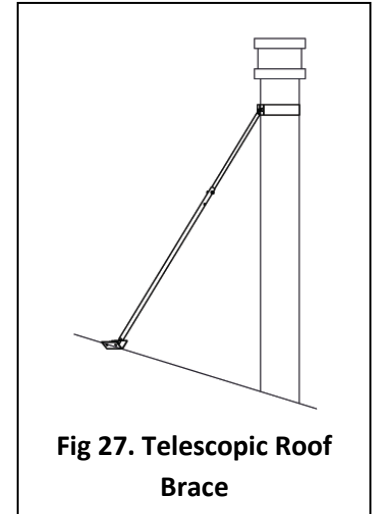

### Final Check

Before completing assembly, recheck all joints to ensure the locking band has been properly installed and has captured the bead. Confirm all clearances and support spacing is correct. Remove any protective film or packaging materials from chimney components.



### Important Notice

The UL listing for this product is void if components other than the Listed Components are used. All warranties, stated or implied, are void if the vent or appliance is installed in a non-conforming manner.

### Operation & Maintenance

The method and materials burned in your appliance directly affects the formation of creosote & soot. Burn only seasoned firewood. Avoid burning green or unseasoned wood. Follow the appliance manufacturers owner's manual for instructions on how to operate the appliance, start and build a fire.

When wood is burned slowly, it produces tar and other organic vapors, which combine with expelled moisture to form creosote. The creosote vapors condense in the relatively cool chimney flue of a slow-burning fire. As a result, creosote residue accumulates on the flue lining. When ignited this creosote makes an extremely hot fire. The chimney should be inspected once every 2 months during the heating season to determine if a creosote or soot buildup has occurred. If creosote or soot has accumulated, it should be removed to reduce the risk of chimney fire.

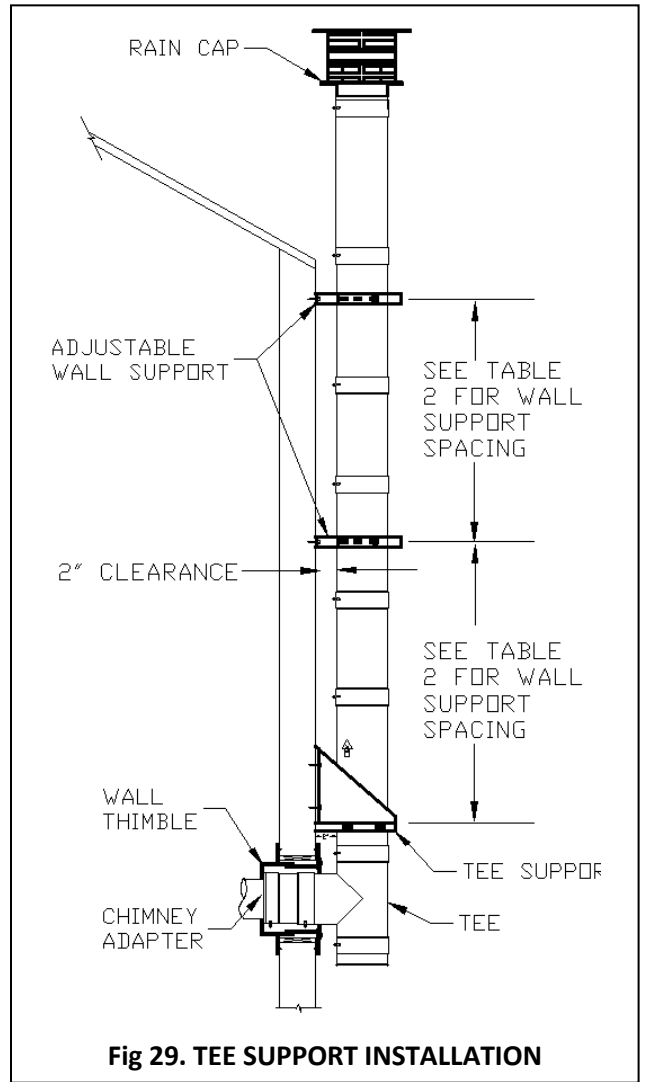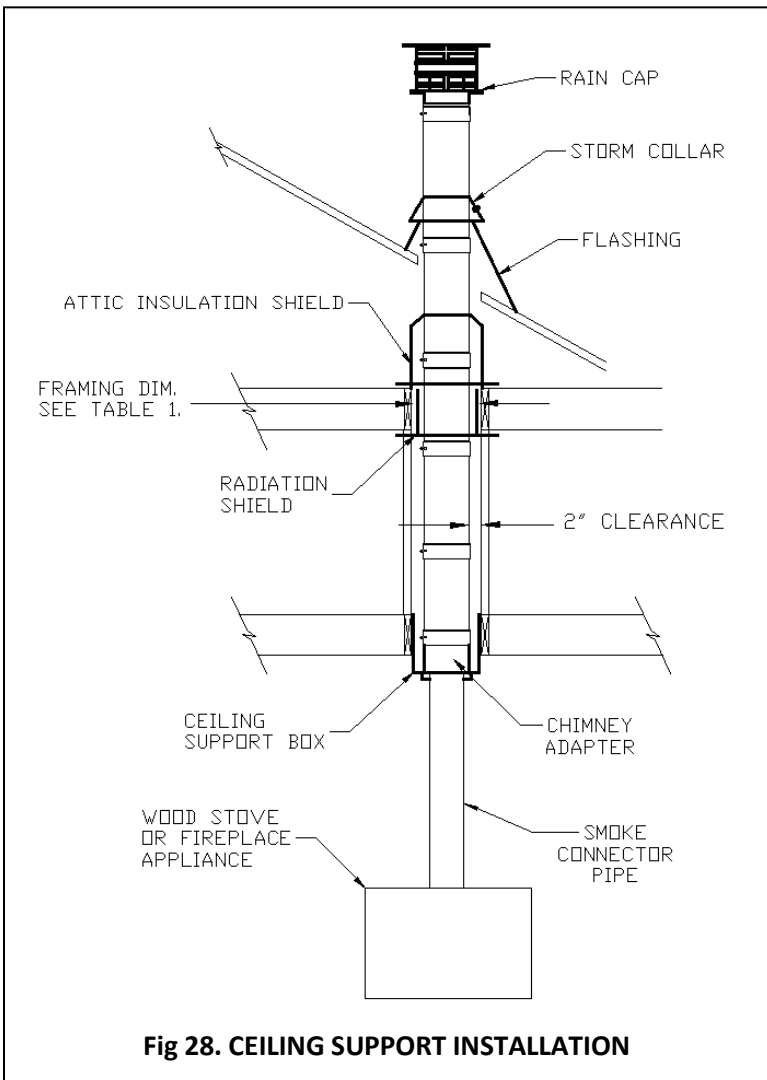

## Jeremias 25 Year Warranty

### I. 1-Year Limited Warranty

Jeremias Inc. ("Jeremias") provides a 1-year limited warranty ("1-Year Limited Warranty") for its UL-103 HT Chimneys, all variations of Model HT (collectively, the "Products") for any defect in workmanship or materials under normal use from the date of shipment to the purchaser of Products ("Purchaser"), subject to the following conditions:

- Product sizing and specifications have been performed in accordance with generally accepted engineering practices.
- Correct installation and maintenance in full compliance with Jeremias' installation and maintenance instructions as published at the time of installation.

### II. Extended 25-Year Limited Warranty

Jeremias provides for an extended 25-year limited warranty ("25-Year Limited Warranty") for any defect in workmanship or materials under normal use (excluding termination caps) from the date of shipment to the Purchaser, transferable to subsequent purchasers of the home or building during the described term of the warranty and subject to the satisfaction of the following conditions:

- Product will be installed by a chimney or venting professional familiar with standard chimney practice, fire codes and the Jeremias installation instructions or an inspector authorized by Jeremias, that the Product assembly and installation conformed to all of Jeremias' assembly and installation instructions.
- Products were at all times operated and maintained in full compliance with Jeremias' operation and maintenance instructions as published at the time of installation or as later provided to Purchaser by Jeremias.

### III. Exclusion of Limited Warranty

The 1-Year Limited Warranty and the 25-Year Limited Warranty (collectively the "Limited Warranty") shall not cover (i) Product deviations which do not effect functionality; or (ii) damages caused by: contamination of ambient air or combustion air by chlorinated hydrocarbons or other vapors which may cause excessively severe acid condensate to form within the Products; merchandise provided by other manufacturers; installation, transport or start up; Purchaser, and installer or other third parties; normal wear and tear; any party other than Jeremias in a willful manner; force majeure, including, but not limited to flood, fire or frost; non-compliance with the assembly, installation, operation and maintenance instructions available at [www.JeremiasInc.com](http://www.JeremiasInc.com); assembly, installation, maintenance or repair by unqualified personnel; improper start up; use of Products not in accordance with their intended purpose; exposure of Products to any metals of an inferior quality; contamination of the Products between unpacking and assembly; burning of wood other than unpainted, natural wood, which has been stored for at least 3 years and which moisture level does not exceed 20%; or burning of chipboard or domestic waste.

### IV. Remedies

If a valid Limited Warranty claim arises, Jeremias shall, at its sole discretion, either repair the Product or deliver a properly functioning Product. This Limited Warranty is limited to repair or replacement of the Product plus shipping cost to the location of the defective Product. The Limited Warranty does not cover labor costs for removal or replacement of the defective Product, unless such labor shall be carried out by Jeremias itself in its sole discretion.

### V. Filing of a Limited Warranty Claim

Limited Warranty claims may only be asserted during the term of the applicable Limited Warranty period. Any extension of the term of the Limited Warranties shall be excluded, regardless of the legal basis. If Purchaser believes that there is a justified Limited Warranty claim, Purchaser shall notify Jeremias to that effect in writing. Any claims stemming from or relating to a Limited Warranty shall be asserted in detail within eight weeks after the discovery of the defect (the time when the notification is received by Jeremias will be the basis for determining whether a claim has been reported within this deadline) or else shall be excluded and not be recognized by Purchaser. Such notification shall include a description of the defect, original proof of purchase, and a copy of the written inspection report as described in Section II above (if applicable).

### VI. No Other Warranty

EXCEPT AS SET FORTH EXPRESSLY THEREIN, JEREMIAS MAKES NO WARRANTIES, EITHER EXPRESS OR IMPLIED, REGARDING THE PRODUCTS, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

### VII. Damages Disclaimer and Limitation

IN NO EVENT SHALL JEREMIAS BE LIABLE TO ANY CLIENT OR ANY OTHER PERSON FOR ANY (A) INDIRECT, INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, INCLUDING LOSS OF PROFIT OR GOODWILL OR (B) DIRECT DAMAGES TO BODY, HEALTH OR PROPERTY FOR ANY MATTER ARISING OUT OF OR RELATING TO THE PRODUCTS, WHETHER SUCH LIABILITY IS ASSERTED ON THE BASIS OF CONTRACT, TORT OR OTHERWISE EVEN IF JEREMIAS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL JEREMIAS' TOTAL AGGREGATE LIABILITY FOR DAMAGES EXCEED THE GREATER OF THE AMOUNT OF (A) TOTAL COMPENSATION PAID BY PURCHASER TO JEREMIAS FOR THE PRODUCTS, OR (B) PROCEEDS AVAILABLE FROM ANY INSURANCE POLICY IN EFFECT AND APPLICABLE TO THE EVENT GIVING RISE TO SUCH LIABILITY.

### VIII. Notice

Any notice or other communication hereunder to Jeremias shall be sent postage prepaid, by certified mail, by courier such as United Parcel Service or e-mail, to the following: Jeremias Inc., 1255 Kennestone Circle – Suite 150, Marietta, GA 30066, E-mail: [Info@JeremiasInc.com](mailto:Info@JeremiasInc.com). Notices shall be effective upon receipt.

### IX. Terms and Conditions of Sale

Purchaser's Terms and Conditions of Sale as currently in effect shall govern these Limited Warranties, including without limitation the rights and responsibilities granted hereunder. Jeremias Warranty and Terms & Conditions apply. Visit: <https://jeremiasinc.com/downloads/terms-conditions/>

## PRODUCTION SITES

### USA

Jeremias Inc.  
1255 Kennestone Circle  
Suite 150  
Marietta, GA 30066  
Phone: 678-388-2740  
Email: info@jeremiasinc.com

### GERMANY

[www.jeremias.de](http://www.jeremias.de)

### POLAND

[www.jeremias.pl](http://www.jeremias.pl)

### SPAIN

[www.jeremias.com.es](http://www.jeremias.com.es)

### RUSSIA


[www.jeremias.ru](http://www.jeremias.ru)

### CZECH REPUBLIC

[www.jeremias.cz](http://www.jeremias.cz)

### UNITED KINGDOM

[www.jeremias.uk](http://www.jeremias.uk)

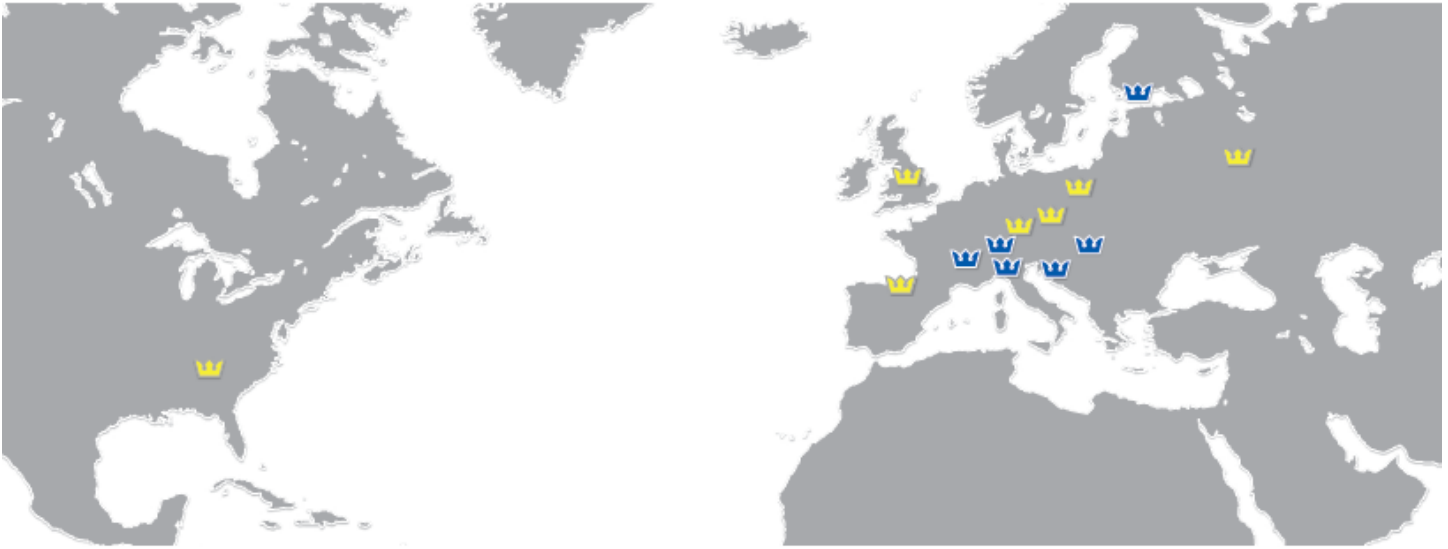

## SALES OFFICES

### FRANCE

[www.jeremias-france.fr](http://www.jeremias-france.fr)

### HUNGARY

[www.jeremias.hu](http://www.jeremias.hu)

### CROATIA

[www.jeremias.hr](http://www.jeremias.hr)

### FINLAND

[www.jeremias.fi](http://www.jeremias.fi)

### SWITZERLAND

[www.jeremias-schweiz.ch](http://www.jeremias-schweiz.ch)

### ITALY

[www.jeremias.it](http://www.jeremias.it)

## JEREMIAS IS REPRESENTED IN THE FOLLOWING COUNTRIES:

Austria | Belarus | Belgium | Bulgaria | Brazil | Denmark | Estonia | Hong Kong | Ireland | Kazakhstan | Latvia | Lithuania | Luxembourg | Malta | Netherlands | Norway | Portugal | Romania | Saudi Arabia | Serbia | Singapore | Slovakia | Slovenia | South Africa | Sweden | Tunisia | UAE | Ukraine

The expert in your area:

Jeremias high quality products to be installed only by selected experts.

[www.jeremiasinc.com](http://www.jeremiasinc.com)

**Jeremias**<sup>®</sup>  
EXHAUST SYSTEMS